

Barn Door Tracker

wiring diagram

Experiment with the batteries to achieve a steady slow speed.

The push switch is used to provide pulses of power to move the drive disc.

The slide switch allows the mount to be reversed for resetting the position

